

Voor FreeStyle LibreLink versie 2.8.1

	Apparaat	Besturingssysteem
Android	• Samsung Galaxy A7, A20, A20e, A21, A22, A23, A30, A32 5G, A33 5G, A41, A50, A51, A52 5G, A53 5G, A70, A71 5G, Feel2, M31, Note 8, Note 9, Note10+, Note10 Lite, Note20 Ultra 5G, S7, S7 Edge, S8, S8+, S9, S9+, S10, S10 5G, S10e, S10+, S20, S20 FE5G, S21 5G, S21 5G Olympic Games Edition, S21+ 5G, S22, Z flip3 5G, Z Fold3 5G. • FOXXD MIRO+ • Fujitsu Arrows 5G, Be3, Be4, Be4 Plus, NX9, U • Google Pixel, Pixel 2, Pixel 2XL, Pixel 3, Pixel 3XL, Pixel 4, Pixel 4XL, 4a 5G, 5, 6, 6 Pro. • Huawei P20 Pro, P30 Lite • Kyocera Torque G04 • LG Nexus 5X, style 2, style3 • Motorola moto G51 5G, moto660S, one 5G ace. • OPPO Reno A, Reno3 A, Reno5 A • Sharp AQUOS R3, R5G, sense3, sense3 plus, sense3 plus sound, sense4, sense4 basic, sense4 lite, sense 5G, zero2, ZETA • Sony Xperia 1, 1 II, 5, 5 II, 8, 10 II, 10 III, Ace II • Tinno Rakuten Hand, Rakuten Mini • Xiaomi Redmi Note 9T, Redmi Note 9 Pro, Redmi Note 9T, 10 Pro, Note 10 5G, 11 Lite 5G NE, 11T, 11T Pro, MiNote 10 Lite, PocoF3, Poco X3 NFC	Android 8*, 8.1* 9*, 10, 11, 12, 12.1
iPhones	• iPhone 8, 8 Plus, X, XR, XS, XS Max, 11, 11 Pro, 11 Pro Max, 12, 12 Pro, 12 Pro Max, 12 Mini, SE (2020), 13, 13 Mini, 13 Pro, 13 Pro Max, SE (2022), 14.	iOS 14.5, 14.6, 14.7.1, 14.8, 15.0, 15.1, 15.2.1, 15.3, 15.4, 15.5, 15.6, 15.7, 16